

## EPS


## 2A RPC Trip or Power Loss

Advisory

RPCM Tripped

User Notification

Loss of power

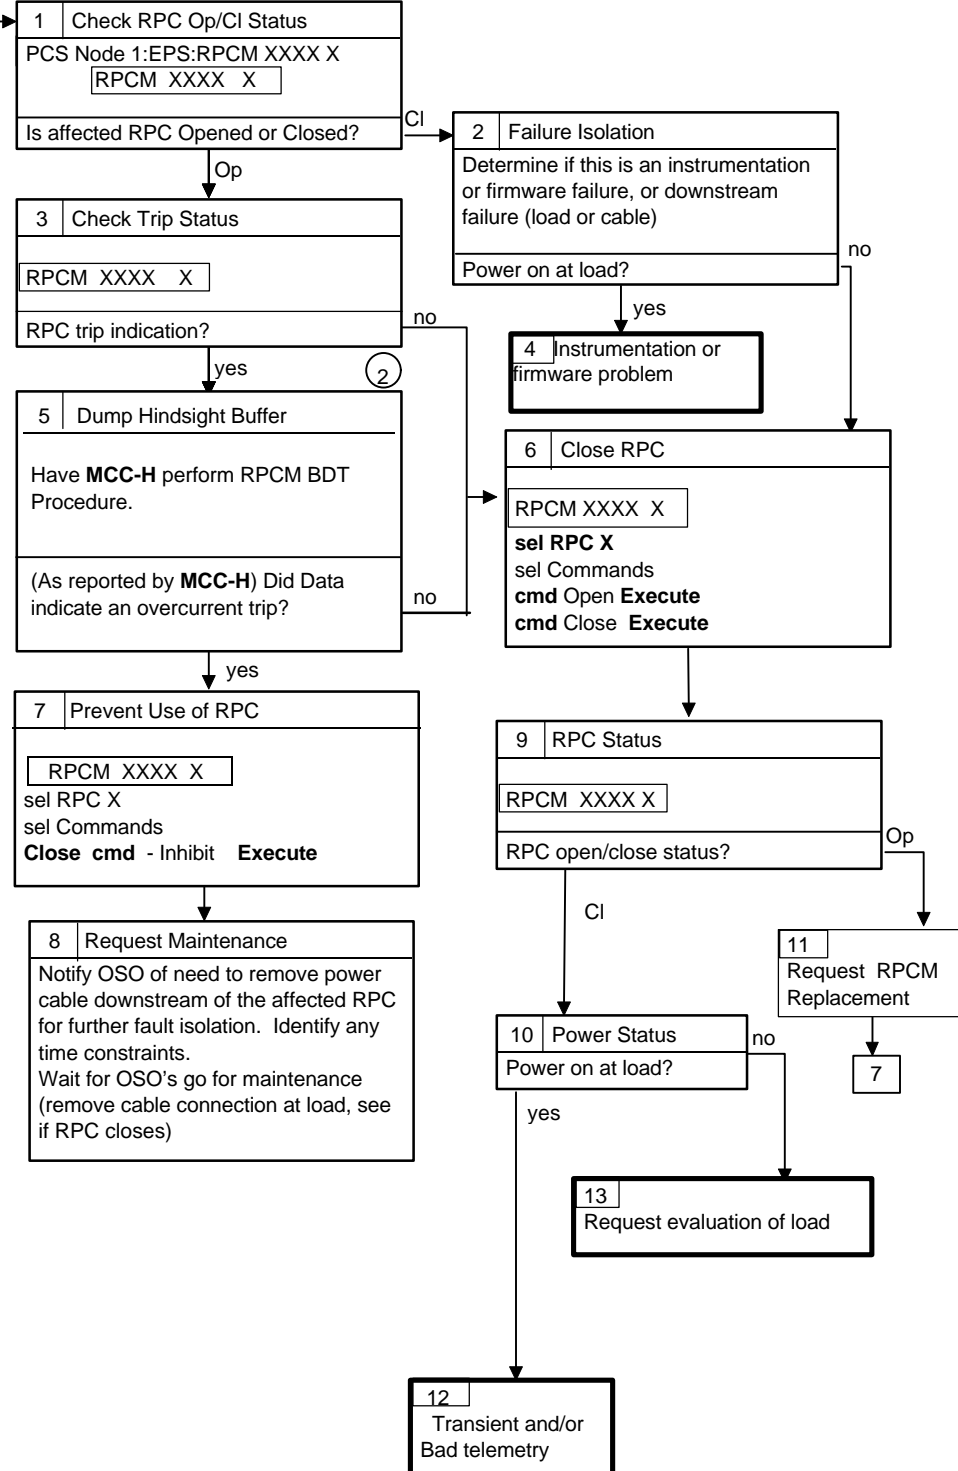

①

C&W advisory message is at the RPCM level but trip indication is for the RPC.

②

Moves data from firmware controller to MDM and then dumps the data from the MDM to the ground.